

## FlipCharger™

### Getting Started

1. Find the power plug that is appropriate for the power outlet style in your country. (Image 1)
2. Slide power plug into the power supply.
3. Plug power supply into power outlet and into the back of the charging base. (Image 2)
4. Insert microphones in either charge pocket or orientation. (Image 3)

Image 1



Image 2



Image 3



### Important Safety Instructions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other equipment (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Unplug this apparatus during lightning storms or when unused for long periods of time.
13. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
14. The apparatus shall not be exposed to dripping nor splashing, and no objects filled with liquids shall be placed on the apparatus.



Scan for complete User and Install Guide

© 2020 FrontRow Calypso LLC, FrontRow Calypso and the names of FrontRow and Calypso products are trademarks or registered trademarks of FrontRow Calypso in the U.S. and other countries. Product specifications and accessories subject to change without notice.

1530-00058/Rev B 0122

### Wall Mount Installation

The FlipCharger can be placed on a desk, or, mounted on a wall to save space!

1. Select a spot on the wall where the power supply can reach the charger.
2. Place the mounting template against the wall and pre-drill two holes into the designated slots. Use 7/32" (0.2188") drill bit for concrete and 1/8" (0.125") for wooden stud. (Image 1)
3. Insert the anchors (if concrete). Place the mounting bracket against the wall and secure with included #6 Pan head screws. Note that the bracket is labeled to show which side should be pointing up. (Image 2)
4. Insert the power plug into the back of the FlipCharger and guide the cable through the channel to secure.
5. Slide the FlipCharger down onto the bracket and click in place. (Image 3)
6. Plug power supply into power outlet and into the back of the charging base. Secure the cable safely to the wall.
7. Insert the Action! and Bravo! microphones to charge.

Image 1

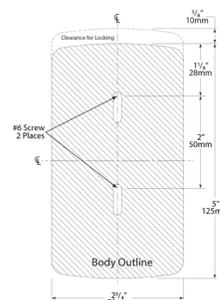


Image 2



Image 3



### Electrical Warnings

#### 1. Avoid Abuse to the Power Supply

To reduce risk of electric shock, unplug the power supply from outlet before attempting any maintenance or cleaning.

**WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

**DO NOT** disassemble the power supply. Return the power supply to FrontRow Calypso LLC for qualified service and repair if service or repair is required. Incorrect reassembly may result in a risk of electric shock or fire.

**DO NOT** expose the power supply to rain, snow, water, gas, oil, etc.

**DO NOT** operate the power supply if it has received a sharp blow, been dropped, or otherwise damaged in any way; return the power supply to FrontRow Calypso LLC for qualified service and repair.

**DO NOT** block or cover the power supply nor the charger and impede ventilation.

#### 2. Proper Use of the Power Supply and Wiring

An extension cord should not be used unless absolutely necessary. Use of improper extension cord could result in a risk of fire and electric shock. The cord **MUST** be plugged into a grounded outlet if using a plug that has a ground prong. Make sure it is properly wired, in good electrical condition, and wire size is large enough for AC ampere rating of the power supply or charger as specified below. AWG = American Wire Gauge.

To reduce risk of damage to plug and cord when disconnecting the power supply or charger, **ALWAYS** pull on plug - NEVER on cord.

Locate cord so that it will not be stepped on, tripped over, or otherwise subject to damage or stress.

**DO NOT** lay extension cord on charger.

**DO NOT** operate the power supply with damaged cord or plug - replace them immediately.