



# VOICE COMMAND REFERENCE SHEET



### To issue a voice command:

1. Press and hold the Smart button on the Pendant Microphone.
2. Wait for Voice Command tone and Tower LCD background or ezRoom Beacon to turn green.
3. Keeping the button pressed, issue one of the commands below.
4. Wait for confirmation tone and Tower LCD background or ezRoom Beacon to return to white.
5. Release the button.

### For best performance:

- Follow the sequence above precisely when issuing a voice command.
- Avoid brushing the microphone against clothing, jewelry, etc. while issuing voice command.
- Speak clearly with a normal conversational tone.
- Do not hold the microphone close to the mouth while speaking a command. The microphone is optimized to understand commands when it is sitting flat on the chest.

TO:	SAY:
Increase volume . . . . .	<b>Increase</b>
Reduce volume . . . . .	<b>Reduce</b>
Lock/Unlock LCD* . . . . .	<b>L-C-D</b>
Start a recording . . . . .	<b>Begin</b>
Pause a recording . . . . .	<b>Suspend</b>
Stop a recording . . . . .	<b>Finish</b>

### Commands available with ezRoom or Juno Connect

Make an intercom call request. . . . .	<b>Intercom</b>
Turn display on . . . . .	<b>Power Up</b>
Turn display off . . . . .	<b>Shut Down</b>
Freeze/Unfreeze projector image . . . . .	<b>Freeze Screen</b>
Blank/Show projector image. . . . .	<b>Blank Screen</b>
Switch AV input. . . . .	<b>Source One</b>
Switch AV input. . . . .	<b>Source Two</b>
Switch AV input. . . . .	<b>Source Three</b>
Switch AV input. . . . .	<b>Source Four</b>
Switch AV input. . . . .	<b>Source Five</b>

**NOTE:** AV control commands must be mapped to the voice commands on the communications module. For more information, please contact FrontRow or your FrontRow reseller.

### Turn this card over and attach to your wall for quick reference



Voice  
Command

# VOICE COMMAND REFERENCE SHEET

## TO: SAY:

Increase volume . . . . .	<b>Increase</b>
Reduce volume . . . . .	<b>Reduce</b>
Lock/Unlock LCD* . . . . .	<b>L-C-D</b>
Start a recording . . . . .	<b>Begin</b>
Pause a recording . . . . .	<b>Suspend</b>
Stop a recording . . . . .	<b>Finish</b>

## Commands available with ezRoom or Juno Connect

Make an intercom call request. . . . .	<b>Intercom</b>
Turn display on . . . . .	<b>Power Up</b>
Turn display off . . . . .	<b>Shut Down</b>
Freeze/Unfreeze projector image . . .	<b>Freeze Screen</b>
Blank/Show projector image. . . . .	<b>Blank Screen</b>
Switch AV input. . . . .	<b>Source One</b>
Switch AV input. . . . .	<b>Source Two</b>
Switch AV input. . . . .	<b>Source Three</b>
Switch AV input. . . . .	<b>Source Four</b>
Switch AV input. . . . .	<b>Source Five</b>

\*Juno Tower only