

## TEACHER'S TIPS

Your FrontRow Pro Digital has an energy-saving STANDBY mode.

The receiver will automatically go into STANDBY mode 10 minutes after you turn off or mute your microphone or stop playing a secondary audio source (Computer, TV/DVD, CD, etc.)

The receiver will come out of STANDBY mode automatically when:

- You turn **on** and/or **un-mute** a microphone
- You play an audio source connected to the receiver

### START OF DAY

**Step 1** Put microphone around neck and adjust strap so it is 5in (13cm) from your mouth.

**Step 2** Turn microphone **on**. This will also take the receiver out of STANDBY mode.

**Step 3** Speak in a normal conversational tone. Adjust receiver volume to a comfortable level.

### END OF DAY

**Step 1** Turn microphone **off**. **Note:** Receiver will go into STANDBY mode automatically. You do not need to turn it **off**.

**Step 2** Charge microphone overnight.

#### Microphone




Green ..... Power On  
Blinking Green ..... Muted  
Blinking Red ..... Battery Low

#### When Charging:

Off ..... Alkaline Battery Detected  
Red ..... Charging  
Blinking Red ..... Maintenance Charge

#### Receiver

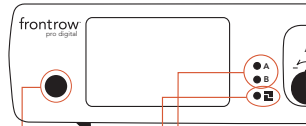

Green ..... Power On  
Yellow ..... Standby  
Green ..... Signal Received  
Red ..... No Signal/Muted  
Green ..... Feedback suppression active

### BATTERY TIP

To ensure best performance, and avoid equipment damage, FrontRow recommends replacing rechargeable batteries at the beginning of each school year.

Batteries cause the majority of troubleshooting problems. If your system doesn't appear to be working, try replacing the batteries with fresh cells first.

Visit [www.gofrontrow.com/support](http://www.gofrontrow.com/support) for user instructions and troubleshooting tips.

Register your product at [www.gofrontrow.com/register](http://www.gofrontrow.com/register) to be entered in a drawing for cool stuff.

View our training video at [www.gofrontrow.com/pro-digital/resources](http://www.gofrontrow.com/pro-digital/resources).

